

## Save Infratek Software Settings in \*.log Files

\*\*\*\*\*

There are two methods to store / reload software settings.  
We describe here both possibilities:

### Save different settings in one single file (\*.log)

1. Launch/RUN the software and configure the front panel (RunTime mode);
2. STOP the program; then go to *Operate/Data Logging/Log...*;
3. "Select a log file..." → Choose file name (i.e. MySetting.log);  
→ press SAVE;

to store more settings...:

Start software → configure the front panel → stop the program → press *Log...*;

### Save different settings in different files (\*.log)

1. Launch/RUN the software and configure the front panel (RunTime mode);
2. STOP the program; then go to *Operate/Data Logging/Log...*;
3. "Select a log file..." → Choose file name (i.e. MySetting.log);  
→ press SAVE;
4. Save each setting in a separate file.

### Load configuration from file (different settings from one single file)

1. Select *Operate/Data Logging/Change Log File Binding*;
2. Choose file (i.e. MySetting.log) → OK;
3. Select *Operate/Data Logging/Retrieve*;
2. Scroll and select the setting...;

i.e. 0: Basic Value  
1: Basic Value II  
2: Energy  
3: etc.

### Load configuration from file (different settings from separate files)

1. Select *Operate/Data Logging/Change Log File Binding*;
2. Choose file (i.e. MySetting.log) → OK;
3. Select *Operate/Data Logging/Retrieve*
4. OK → Run.